


Installation Instructions – wedi Suspended Corner Seats



Apply wedi Joint Sealant to the side of the mounting bracket that will be attached to the wedi Building Panel wall.



Evenly distribute wedi Joint Sealant with a putty knife until the whole contact area is covered.

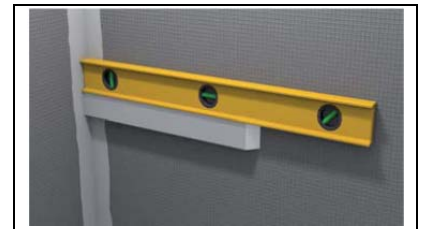


Using a level, make sure you can achieve a slight pitch (1/8" over 1 ft.).




Mount the brackets through the wedi Building Panel wall into the solid 2' x 4' wooden framework.




Using a putty knife, apply wedi Joint Sealant to the blue foam edges of the seat that will contact the wedi Building Panel wall and brackets.

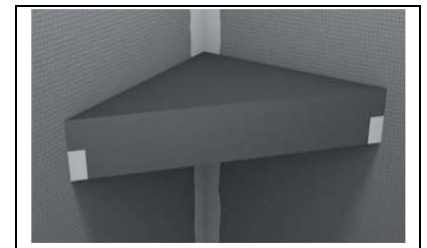

Press the seat element into position and apply a weight (i.e., tile box) so the sealant can set under bond pressure.

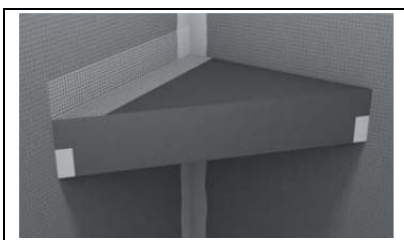

Apply wedi Meshtape to the transition joint between the seat element and the wedi Building Panel wall. Apply a flat thinset mortar bed over the Meshtape and fully embed it.

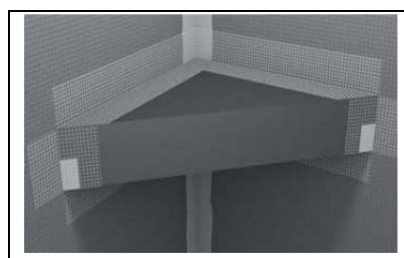

Apply Step 7 now to the underside of the seat element. Apply wedi Meshtape and thinset mortar to the vertical seams as well.